

SNOW CONE ICE SHAVER MACHINE

Customers please read the following instructions to prevent any damage to the machine:

1. The machine needs to be installed on a sturdy table (you supply).
2. The machine needs one power outlet.
3. The machine can only be operated by adults.
4. You need 4 x 5kg. bags of ice per 100 serves (you supply).
5. When cleaning or unjamming always disconnect the power lead.
6. Never leave the machine unattended while it is running.
7. Do not use outdoors unless protected from rain and sun.
8. Place the ice tray under the machine.
9. Lift the handle out of the hopper.
10. Place ice cubes (no more than 3cm diameter) into the hopper. Do not fill too high as the machine will not start. Turn on the power.
11. Lower the handle into the hopper and the machine should start.
12. When each batch of ice is completed, lift the handle, the machine will stop, re-fill the hopper with ice and repeat.
13. Lift the handle at any time to stop the machine.
14. **WARNING:** Large size ice can jam the machine and burn out the motor.